Power / Energy meter - Single phase AC/DC RS485 MODBUS

- THD available on the Current measurement
- 0,5 % Accuracy
- RS485 Modbus integrated
- Bidirectional Energy metering
- Din rail mountable
- Fully configurable by free interface software
- Bootloader for updating firmware
- Available Measure register: MSW first, LSW first or hundreds



Technical data

Function

Single-phase Power meter able to measure RMS AC or DC Current and Voltage.

1. Mechanical design					
PBT plastic housing, IP rating IP20					
DIN-rail mountable with DIN-rail clips (included) for horizontal/vertical					
mounting, screw predisposition for horizontal/vertical mounting					
Mounting position:	any				
Dimensions:	46,1 x 63 x 26,4mm (without connectors)				
	Ø15mm (current transformer)				
Terminals:	- 1,5mm ² 4-pole connector (3,5mm pitch)				
	- 1,5mm ² 2-pole connector (3,5mm pitch)				
DIP-switch:	2 poles (Baudrate and Address) for connection				
	with the configuration coffusors				

 with the configuration software

 Weight:
 80g

2. Indicators

Yellow LED ON: indication of supply voltage Yellow LED flashing: indication of communication via RS485

3. Power Supply

Input: 9...30 V DC; terminals Pow(+), GND(-) Protection against polarity reversal and overtemperature Power consumption: < 1,3 W

4. RS485 Modbus RTU

Baudrate: 1200 ... 115200 Baud (Standard: 9600); terminals GND, A+, B-

5. Measuring circuit

o. Measuring circuit					
Measurements available: Irms, Vrms, Watt, Var, Va, Vpk, Ipk,					
	Frequency, Cosφ, Energy bidirectional,				
	THD, MIN and MAX of each measure				
Type of Measure:	RMS or DC				
Sampling rate:	11k samples per second				
Crest factor:	1,8 (current measurement)				
Working frequency:	1 400Hz or DC				
Imput impedance:	1MΩ ±1%				
Range:					
Current:	up to 50A AC/DC				

Voltage:

up to 50A AC/DC up to 800V AC / 1000V DC

6. Accuracy (@25°C up to 200Hz)

Current sensors:

Voltage, Current, Active Power:< 0,5% f.s.</td>Frequency:+/- 0,1 HzEnergy:+/- 1% of readingVpeak, I peak:+/- 5% f.s.Range 500mV < V < 10V:</td>Maximum error 0,5%Temperature coefficient:<100ppm/°C</td>Band Width:> 800Hz

7. General specifications

Temperature coefficient:< 200 ppm/°C</th>Operation temperature:-15 to +65°C

•••		2800	

S6XM50A1000VM



Storage temper Humidity: Altitude: Overvoltage cat		-40 to +85°C 10 to 90% (not condensing) Up to 2000m above sea level Cat III up to 600V; Cat II up to 1000V
Isolation:	3kV on bare wire for Current measure	
	0	measure (reinforced insulation to
		nd serial output)
Standards:	EN61000-6-4/2	006 + A1 2011;
	EN64000-6-2/2	005; EN61010-1/2010
Certifications:	CE, UL recognized component	
Configuration:	With software or via RS485 Modbus. Comunication to free interface program for: - configuration of all the available parameters; - possibility of firmware upgrade (if available).	

DIP-switch:

DIP 1	DIP 2	
0	0	All settings from Eeprom
1	0	Address 1, Baudrate 9600
1	1	Address 1, Baudrate 38400

<u>Remarks:</u>

- Modbus connection: A+ and B- as per Modbus RTU standard
- Modbus Register reference: with reference to the logical address, for example 40010, corresponds to physical address n°9 as per Modbus RTU standard
- Modbus functions supported: 3 (read multiple registers, max 100), 6 (write single), 16 (write multiple)
- Any changes made by dip-switch requires to reset via power supply or sending reset command

Energy storage data on flash memory:


Minimum Current measurement (cut off): Minimum Power measurement (cut off): Measurement refresh: 4,5 years minimum,
45 years typical
250mA
1 W
every 50 cycles or 1 second (the faster), programmable with software

S6XM50A1000VM Part No. 2800200

Configuration software


The free interface software is downloadable from our website www.tele-online.com/products/sensact To communicate with the module you have to connect via USB port directly on your PC using the serial converter S-USB485; part No. 498513. You can configure the module via RS485 using the register map downloadable at <u>www.tele-online.com/products/sensact</u>

Connections

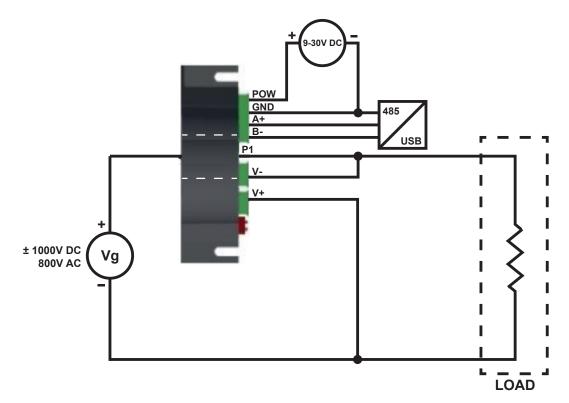


Positioning clips for DIN-rail

For vertical DIN-rail mounting

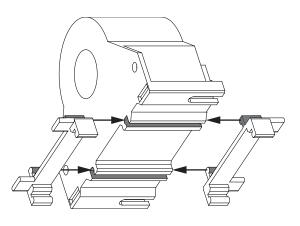

For horizontal DIN-rail mounting

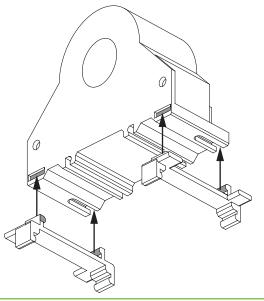

TELE Haase Steuergeräte Ges.m.b.H. Vorarlberger Allee 38 AT-1230 Vienna, AUSTRIA

RELEASE 2018/03

Subject to alterations and errors

